

- Do not laminate over staples or paper clip.
- This machine uses laminating films only. This machine is used for laminating only.
- Do not remove the cover or dismantle the machine, no serviceable parts inside.

CLEANING AND MAINTENANCE

Since deposits of residue will influence the effectiveness of laminating please clean the rollers periodically after use by inserting a folded letter size paper into the entrance of the laminator. Any residues will come out on the paper. Repeat this process several times to clean the rollers.

Model	50325
Operating Voltage	120V AC, 60Hz
Current	0.5A
Warm up time	approx.3 - 5 mins
Pouch thickness range	80-125 mik
Max. laminating width	234 mm
Laminating speed	approx.25cm/min
Max. laminating thickness	0.5 mm
Dimension	349x114x62mm
Weight	0.68kg

ntec declares this complies with the Directives as listed in this document:
EMC 2014/30/UE, LVD 2014/35/UE.

	<p>Producer: ntec ul. Chorzowska 44B, 44-100 Gliwice, Poland</p>	<p>www.ntec.eu WEEE/BDO: 000137497 Made in Vietnam Designed in Europe</p>	
---	--	---	---




Qoltec®

USER'S MANUAL LAMINATOR

Model: 50325

PACKAGE CONTENTS

1. Laminator
2. User manual

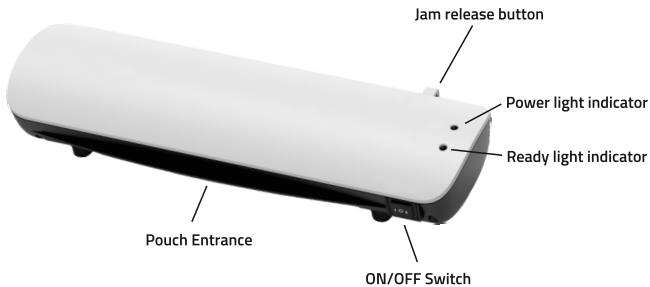

USING YOUR LAMINATOR

This laminator is operated by switch (ON/OFF) located at the front side of the appliance.

- Plug the machine into outlet.
- Turn the switch to **ON** position, the RED power LED will light up, the machine will start to heat up. After 3-5 minutes, the Green READY LED will illuminate when the machine has reached the operating temperature. The machine is ready to laminate.
- Insert the document into the correct pouch size. Leave approximately 3 to 5mm each side of the pouch. It's highly recommended NOT to put several smaller documents into a large pouch. This may cause poor laminating effects and pouch jams.
- Insert the pouch evenly, with the closed end first, into the laminator entrance until it engages with the rollers. Do not use pouches thicker than 125mik and never insert a pouch open edge first into the machine.
- The pouch will move through the machine and exit at the rear. The laminated documents exiting the machine may still be hot, so precautions are required while handing.
- Turn the laminator **OFF** after use and remove the plug from power supply.

NOTE: Do not insert the open side of the pouch into the laminator.

JAM RELEASE

1. The machine is equipped with a **JAM RELEASE** button to clear document jams, which is located at the back of the machine.
2. Symptoms of Paper Jams:
 - Documents fail to exit
 - Abnormal noises are heard during operation
 - Document become wrinkled on its way through the machine.

3. Once document jams occur, **turn OFF** the machine immediately, push and hold the **JAM RELEASE** button and pull out the document by hand.

TROUBLE SHOOTING

WARNING: Do not attempt to repair the machine. This will void the product warranty. If you have a problem, contact the manufacturer's service.

1. No power, indicators do not light up and / or no operation
 - Ensure the machine is correctly plugged in and the power switch is turned to ON position. If the machine is still not working, call for repair.
2. Document Jams
 - Verify the correct pouch thickness as specified (80-125mik) used. Ensure that the document is inserted evenly into the machine. Follow the instructions in "Jam Release" section to clear the jam.
3. Mat laminates or pouch does not completely seal the document
 - Pass through laminator again, which will help to improve the quality.
4. Wait longer time (more than 5 minutes) to warm up the machine.
 - Warm up time may take longer than 5 minutes depending on the room temperature.
 - It will take 3-5 minutes to warm up the machine at room temperature 25-28 °C. The Green READY LED indicator will illuminate when the machine has reached the operating temperature.
 - If the room temperature is lower than 25°C, the machine may take approximately 5-7 minutes to warm up.

WARNING: IMPORTANT SAFETY INSTRUCTIONS

- Do not place fingers, hair, loose clothing and jewelry near the paper feed slot as serious injury may occur.
- The top of the laminator will become hot during use please do not touch.
- Please keep the machine away from children and pets.
- Make sure the on /off switch is on the **OFF** position before plugging in the laminator.
- Follow all warnings and instructions marked on the product.
- Please note cardboard carrier pouches must not be used with this laminator as it may cause jamming or damage to the laminator
- Unplug the laminator when not in use or before moving or cleaning.
- Only clean the Laminator by wiping with a dry cloth.
- Do not place the machine near to any heat source or in a damp environment.
- If the power supply cord is damaged, it must be replaced by a qualified electrician to avoid a hazard.