

***Qoltec***<sup>®</sup>

**Model: 50631**

**INSTRUCTION MANUAL**  
**WIRELESS LASER PRESENTER**  
**EN**

## INTRODUCTION

Thank you for choosing our Wireless Laser Presenter - a tool that will make it easy to give presentations and control slides with great freedom. To ensure safe and effective use of the device, please read this manual before use.

## ABOUT THE PRODUCT

The Qoltec Laser Presenter is an indispensable tool for presenters, lecturers or trainers, enabling wireless control of slides and highlighting key information using a laser with up to 100m beam visibility. Intuitive operation, supported by Plug & Play technology, makes the device ready to use as soon as it is plugged in, without the need to install additional software. Features such as slide change, hyperlink support, volume control and laser pointer make it ideal for professionals and students alike.

## DESCRIPTION OF THE FUNCTIONS

*Illustration 1 in the appendix*

| OPTION                        | FUNCTION                                                                                                                                                                                                                                                                                                                                                     |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1. POWER SWITCH</b>        | Switches the presenter on/off                                                                                                                                                                                                                                                                                                                                |
| <b>2. BATTERY COMPARTMENT</b> | Holds a AAA battery as power source                                                                                                                                                                                                                                                                                                                          |
| <b>3. RECEIVER</b>            | USB receiver to operate the presenter                                                                                                                                                                                                                                                                                                                        |
| <b>4. LASER OPENING</b>       | Emits an infrared laser beam                                                                                                                                                                                                                                                                                                                                 |
| <b>5. LED INDICATOR</b>       | Indicates operating status<br><br>Low battery: When the LED indicator flashes slowly when the Scroll Up/Down button is pressed, the battery needs to be replaced.                                                                                                                                                                                            |
| <b>6. HYPERLINK</b>           | One click: Selects a hyperlink / switches between different links (only works in full-screen mode in the presentation);<br>Double quick click: Opens the selected hyperlink;<br>Long press: Switch applications - once in the application switching window, a single click switches between open applications and a double quick click opens an application. |

|                          |                                                                                   |
|--------------------------|-----------------------------------------------------------------------------------|
| <b>7. PREVIOUS SLIDE</b> | One click goes to previous slide/page up; long press displays black screen / ESC. |
| <b>8. VOLUME CONTROL</b> | Press "+" to increase the volume; press "-" to decrease it.                       |
| <b>9. NEXT SLAY</b>      | One click goes to next slide/page down; long press starts full-screen mode / ESC  |
| <b>10.LASER BUTTON</b>   | Press to emit a laser beam, release to turn off the laser.                        |

**Note:** Some functions may not work on Mac/ Linux/ Android® systems.

## SAFETY INSTRUCTIONS

Following the rules below will ensure safe and long-lasting use of the presenter.

1. The presenter is intended only for controlling multimedia presentations. Do not use it for any other purpose that may damage the device or cause a hazard.
2. Avoid direct contact with the laser. Do not point the laser beam into the eyes or face of others. Direct exposure can cause damage to your eyesight.
3. Be careful not to drop the presenter as this may damage the internal components.
4. Check the battery regularly and replace it when necessary. If the device will not be used for a long time, remove the battery to prevent leakage. Use only recommended battery types.
5. Do not use the laser in areas where its use is prohibited, such as near airports or at shows.
6. The device is not a toy. Keep it out of the reach of children to avoid accidental damage or misuse.
7. The presenter should be used in a dry environment at room temperature, avoiding extremes of weather and humidity.
8. All repairs should be carried out by an authorised service centre. Disassembling the unit yourself may lead to loss of warranty and serious damage.
9. When you are not using the presenter, switch it off to save the battery and prolong the life of the device.

## BATTERY INSTALLATION

1. Open the battery compartment cover on the back of the presenter.  
(*Illustration 2 in the appendix*)
2. Insert one AAA battery, making sure that the polarity (+/-) is correct.
3. Close the cover.

### Attention:

1. Ensure that the polarity of the battery (+) and (-) is correct.
2. Do not leave a damaged or dead battery in the device.
3. Use only recommended battery types. Replace batteries when the device starts to malfunction.
4. Remove the battery if the device will not be used for an extended period of time.
5. Replace the battery if there are operational problems or the operational range is shortened.

## INSTALLATION OF THE USB RECEIVER

Remove the USB mini-receiver from the presenter (*Illustration 3 in the appendix*), plug it into the USB port of the computer and the message "New hardware found" will appear in the bottom right corner of the desktop. The system will automatically install the programme. The installation is complete when Windows displays the message "New hardware has been installed and is ready for use".

## TECHNICAL SPECIFICATIONS

|                   |                                                                                                       |
|-------------------|-------------------------------------------------------------------------------------------------------|
| Power supply      | 1 x AAA battery                                                                                       |
| Operating range   | up to 30 metres                                                                                       |
| Laser distance    | 100 metres                                                                                            |
| Interface         | USB 2.0 (compatible with USB 3.0)                                                                     |
| Operating systems | Operating systems: Windows, Mac, Linux, Android (some features may be limited on Mac, Linux, Android) |
| Features          | Slide change, hyperlink support, volume control, laser pointer                                        |

## PROBLEM SOLVING

|                              |                                                   |
|------------------------------|---------------------------------------------------|
| <b>Presenter not working</b> | Check that the battery is correctly installed and |
|------------------------------|---------------------------------------------------|

|                                                   |                                                                                              |
|---------------------------------------------------|----------------------------------------------------------------------------------------------|
|                                                   | has sufficient power. Try reconnecting the USB receiver.                                     |
| <b>Laser does not work</b>                        | Make sure the battery is not discharged. If the problem persists, contact technical support. |
| <b>Problems with installation on the computer</b> | Make sure the USB port is working properly and the operating system is compatible.           |

## CONSERVATION

1. Do not use the device in damp places or expose it to direct sunlight.
2. Check the battery regularly and replace it when necessary.
3. If the device will not be used for a long time, remove the battery to prevent leakage.
4. Clean the unit regularly with a dry, soft cloth. Avoid using water and detergents.

## UTILISATION

Dispose of the product in accordance with local regulations for the recycling of electronic devices. Do not dispose of the device with your municipal waste.


## INFORMATION ON WARRANTY AND SERVICING

The Qoltec 4-in-1 Presenter comes with a 24-month manufacturer's warranty from the date of purchase. The warranty covers any defects in materials and workmanship. Please contact our service department if you have any problems with your device to ensure a fast and professional service. The warranty does not cover damage resulting from misuse, falls, mechanical damage, unauthorised repairs or disassembly attempts.

1



2

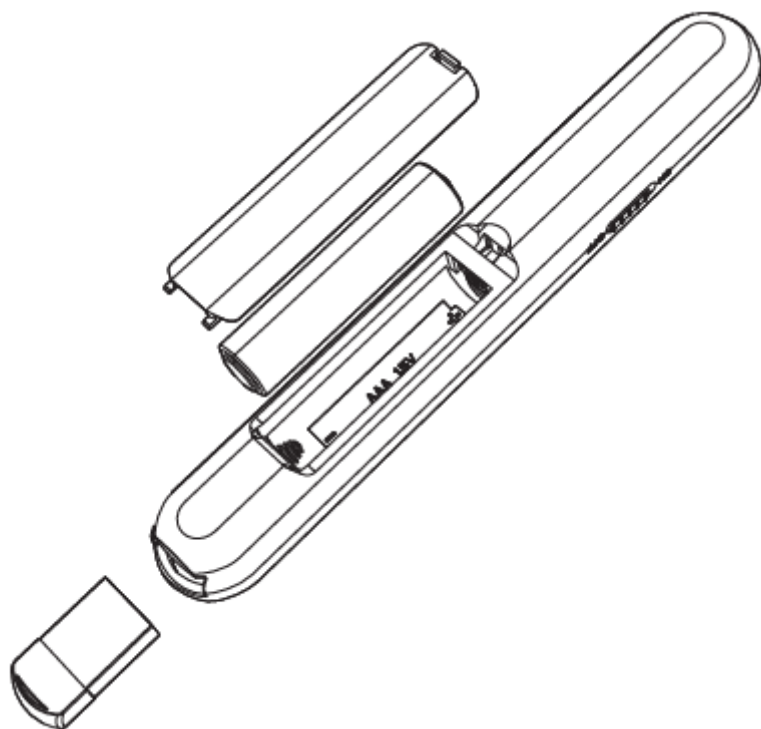

3

